
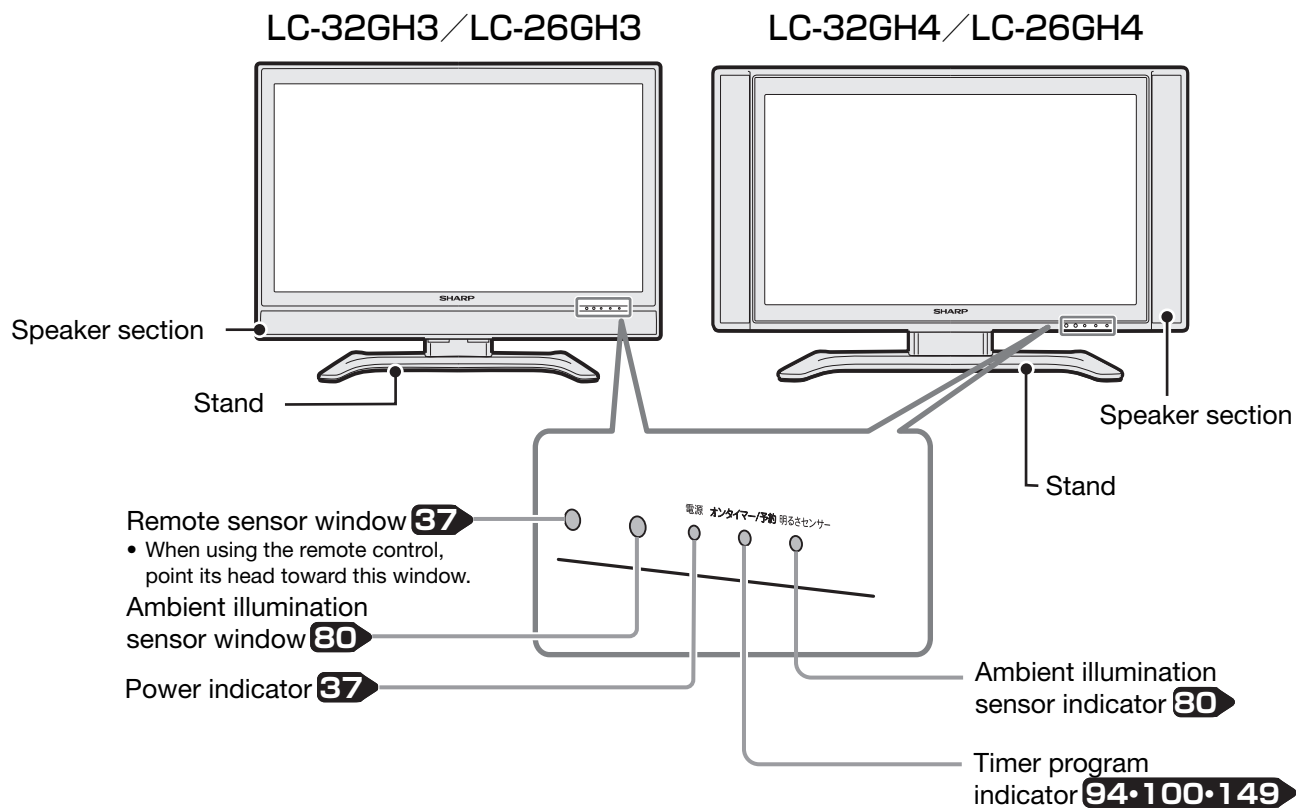 


- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

 
Front view



Adjusting the LCD panel angle


- The LCD panel can be tilted up to 2° forward, up to 6° backward and rotated horizontally up to 10° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Top view

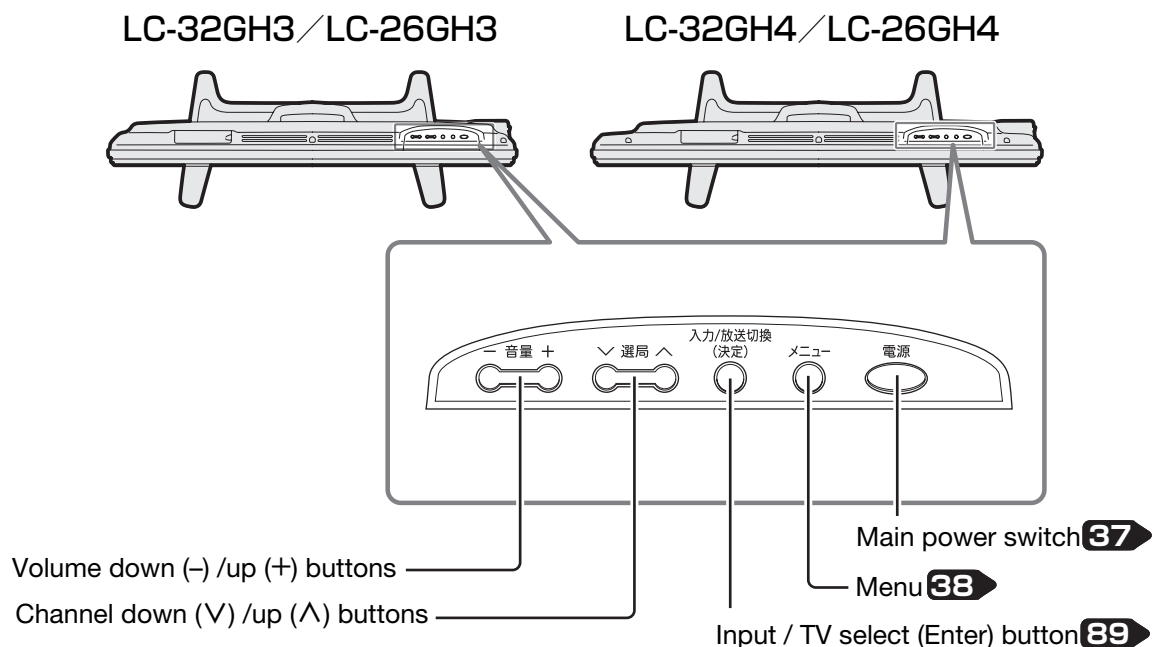

Back view

The illustrations below are those of LC-32GH3. LC-32GH4/LC-26GH3/LC-26GH4 has the same layout of jacks and terminals as LC-32GH3.

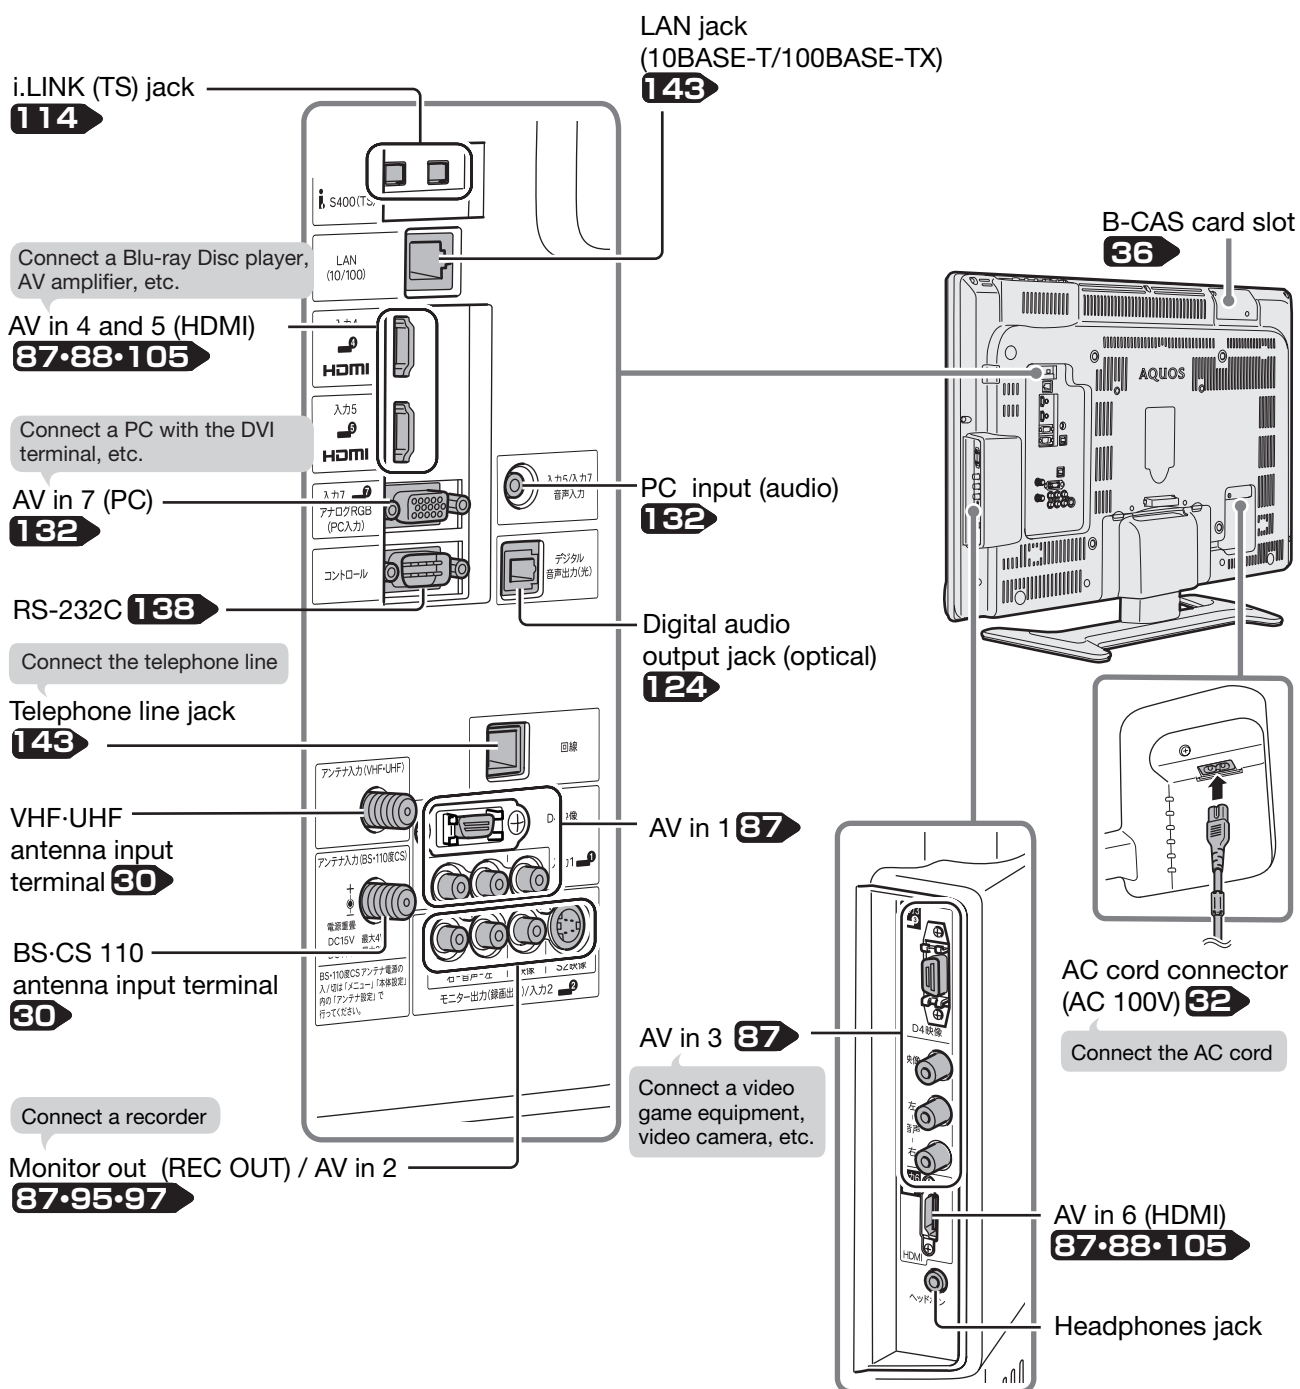 

Part Names – Remote Control Unit

Display 58

Press to display or turn off the channel call, etc.

Active/Standby 37

Press to engage the TV set in the active or standby mode.

CATV 59

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

Terrestrial analog select 58

Terrestrial digital select 58

BS select 58

CS select 58

Select the CS digital channel for the first time. 35

@ (linked data broadcast) 73

Press to call the data broadcast linked with the current digital TV program.

Volume up (+)/down (-)

Press to adjust the volume.

Mute

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Program info 73

Press to display detailed information on the current digital program.

EPG 62

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Other on-air programs 63

Press to display the EPG for currently on-air programs only (裏番組).

Finish 38

Press to finish menu operation, etc.

* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Screen mode 76

Press to select the desired screen mode.

AV mode select 78

Press to select the picture/sound setting that best matches the current program.

Freeze 72

Press to freeze the picture.

i.LINK 116

Press to display the i.LINK control panel.

Favorite channel select/register 59

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Familink 104

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Sleep timer 128

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

Digital channel number input 59

Use to select a digital channel by entering the 3-digit channel number.

Familink 104

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Channel select 58

- Press to select a channel.
- Use to input a number for various settings.

Channel up (^)/down (v) 58

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

* CATV channels are factory set to be skipped.

Media select 58

Press to select the desired media (TV, radio, or data).

Input select 89

Press to select the desired input.

Menu 38

Press to display or turn off the menu screen.

The menus can be displayed in English. See 183 for instructions on how to switch the display language.

Cursor (up, down, left, right) 38

Use to select a menu item, column, etc.

Enter/Confirm 38

Press to confirm a selected setting or menu item.

Return 38

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color 64 • 65 • 73

Use to operate EPGs and data program screens.

Picture select 69

Press to select the desired picture when watching a digital multi-picture program.

Caption 69

Press to display, select, or turn off captions when watching a digital program with captions.

Audio select 68 • 69

Press to select the desired audio.

Split screen 70

 
Press to switch between the split screen mode and the normal screen mode.

Operable screen 70

Press to switch the operable screen when the TV set is in the split screen mode.

To open the cover

Hold the cover by the projections on both sides and lift upwards.

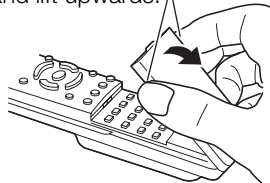

Switching the Display Language to English

メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



★ おしらせ

誤ってメニューを英語にしてしまったときは

- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

- Press**

1 **メニュー** Display the menu screen.
メニューを表示する
- 2** Select “本体設定”(Setup) — “Language (言語設定)”.

「本体設定」－「Language (言語設定)」を選ぶ

Enter.
決定する


体設定 ... Language(言語設定)

音声調整 省エネ設定 本体設定 機能切換

地域設定	
チャンネル設定	
アンテナ設定	
スピーカー設定	
入カスキップ設定	
位置調整	
オートワイド	
映像反転	[しない]
クイック起動設定	[しない]
かんたん初期設定	
Language(言語設定)	[日本語]
時計設定	
個人情報初期化	

- 3** Select “English”.
「English」を選ぶ

 Enter.
決定する

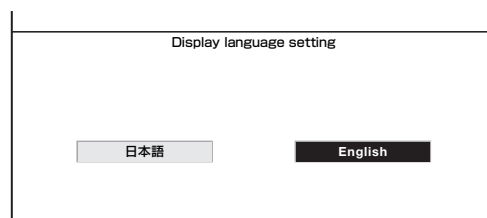

- The menu screen is now displayed in English.

画面表示が英語になります。

- 4** **終了** Finish this operation.
終了する